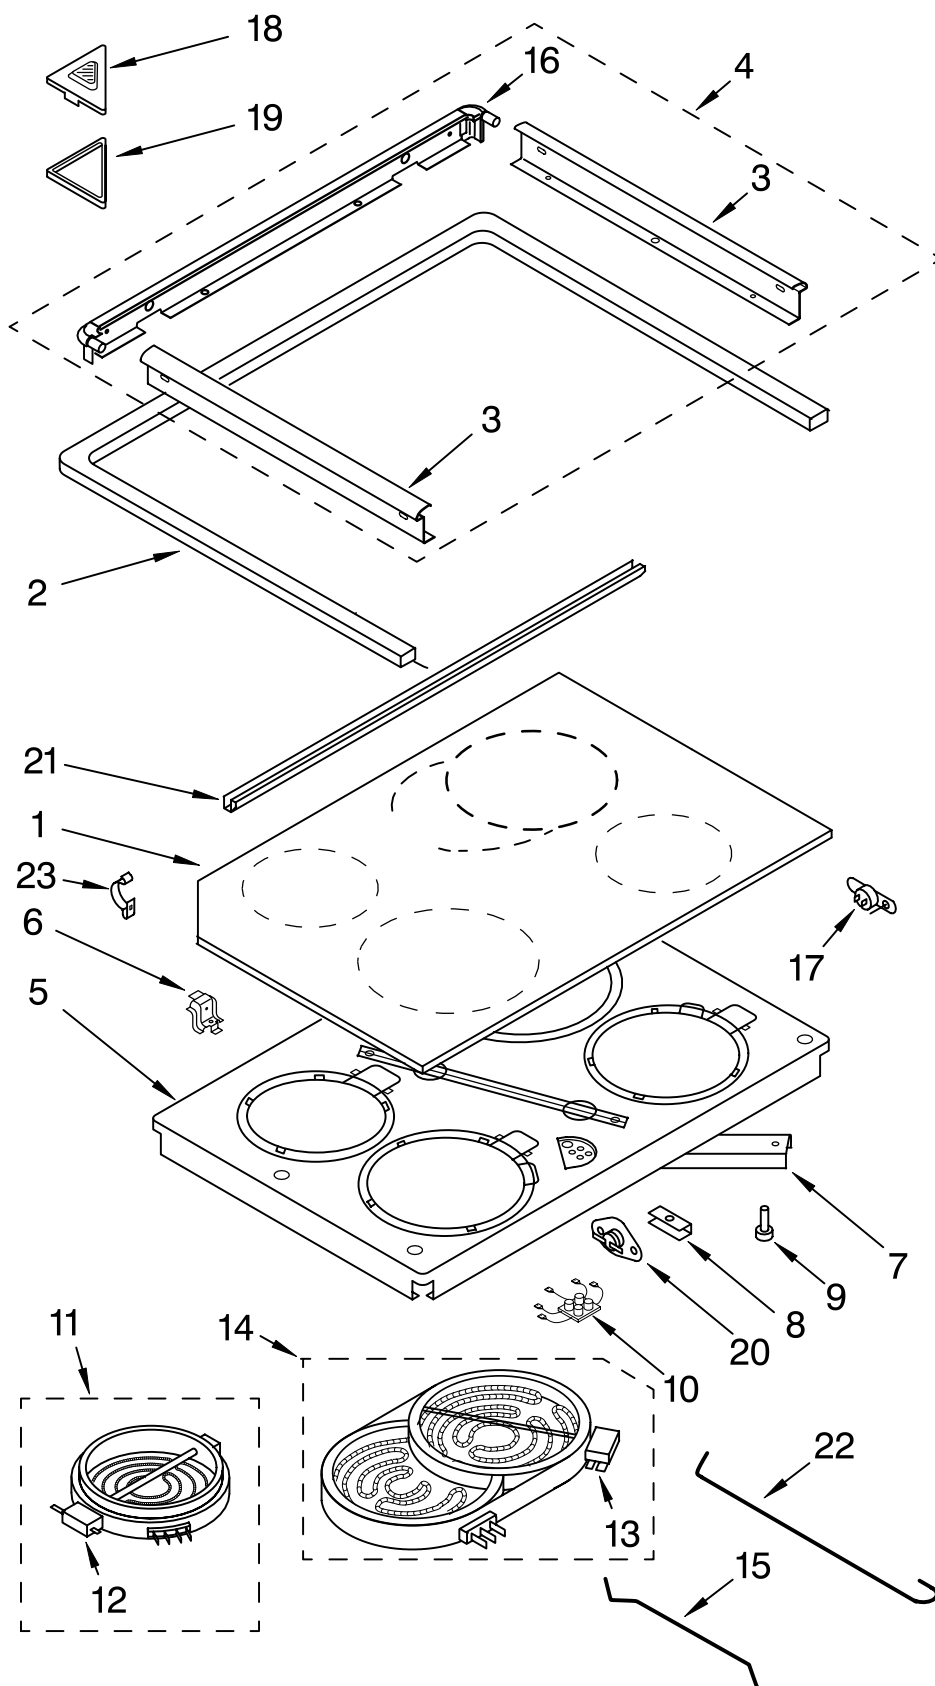


For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1  
(White) (Almond) (Black) (Black-Stainless) (Biscuit)


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9751752	Cooktop, Ceran
	9751753	White
	9751754	Almond
	9751754	Black
2	9780939	Gasket, Cooktop (Front & Sides)
3		Trim, Side
	9781828PW	White
	9781828PT	Almond
	9781828PB	Black
	9781828PC	Biscuit
	9780265	Screw (6)
4		Frame, Cooktop
	9781832PW	White
	9781832PT	Almond
	9781832PB	Black
	9781832PC	Biscuit
5	9781548	Support, Element
6	9751629	Bracket, Pivot
	9780265	Screw (2)
	9752003	Washer (2)
7	9781553	Brace, Support
	9780272	Screw (2)
8	9750821	Support Clips (4)
	9751871	Screw (4)
9		Bumper, Rubber
	9750969	White (4)
	9780771	Black (4)
10	9781497	Hot Light
11		Element, Surface
	8053604	1500W - LR
	8053605	2500W - LF
	8053606	1800W - RF
12	8053620	Limiter
13	3191988	Limiter
14	9753475	Dual Element, RR
15	9781460	Rod, Small
16		Ceran Element Trim, Back (Incl. End Caps)
	9781831PW	White
	9781831PT	Almond
	9781831PB	Black
	9781831PC	Biscuit
17	341196	Thermo-Disc
	9780265	Screw, (2)
18	9751800	Vent, Cover
19	9751841	Gasket, Vent
20	9751984	Bimetal, Fan
21	9751478	Gasket, Console
22	9781459	Rod, Large
23	98997	Clip


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1  
(White) (Almond) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

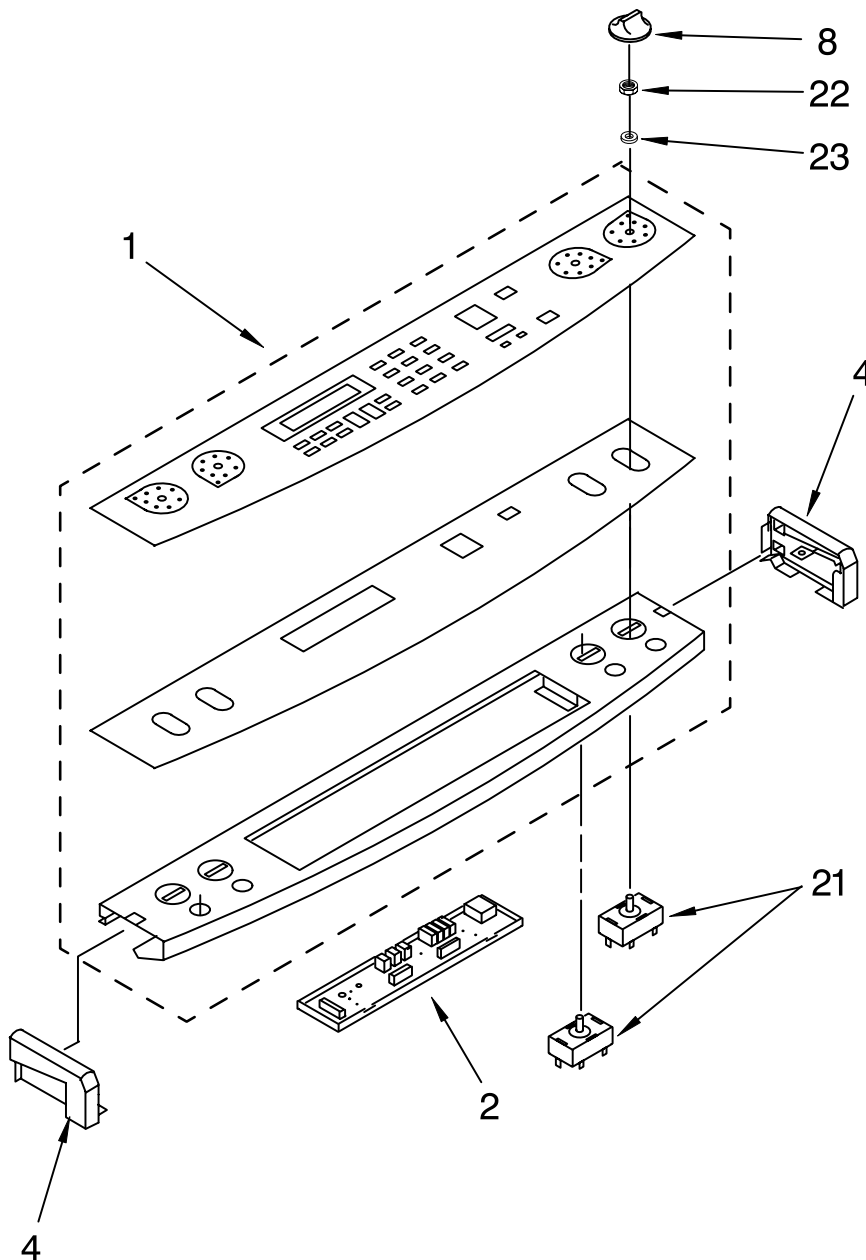


1	9751898	White
	9751903	Almond
	9751900	Black
	9751903CC	Biscuit
2	3191106	Timer, Electronic
	9780271	Screw (2)
4		End Cap
		(Right Hand)
	9751040FW	White
	9751040FT	Almond
	9751040FB	Black
	9751040FC	Biscuit
		(Left Hand)
	9751039FW	White
	9751039FT	Almond
	9751039FB	Black
	9751039FC	Biscuit
	9780265	Screw, (4)
		10 x 3/8
8		Knobs, Control
	9750372FW	White
	9750372FT	Almond
	9750372FF	Black
	9750372FC	Biscuit
21		Switch, Infinite
	9751364	1250-1500W, LR
	9751363	1700W, RF
	9751362	2100-2600W, LF
	9751758	Dual Element, RR
22		Nut, Mounting
	422617	Single Element
	9751711	Dual Element
23	9781455	Seal, Switch (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS

For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1  
(White) (Almond) (Black) (Black-Stainless) (Biscuit)

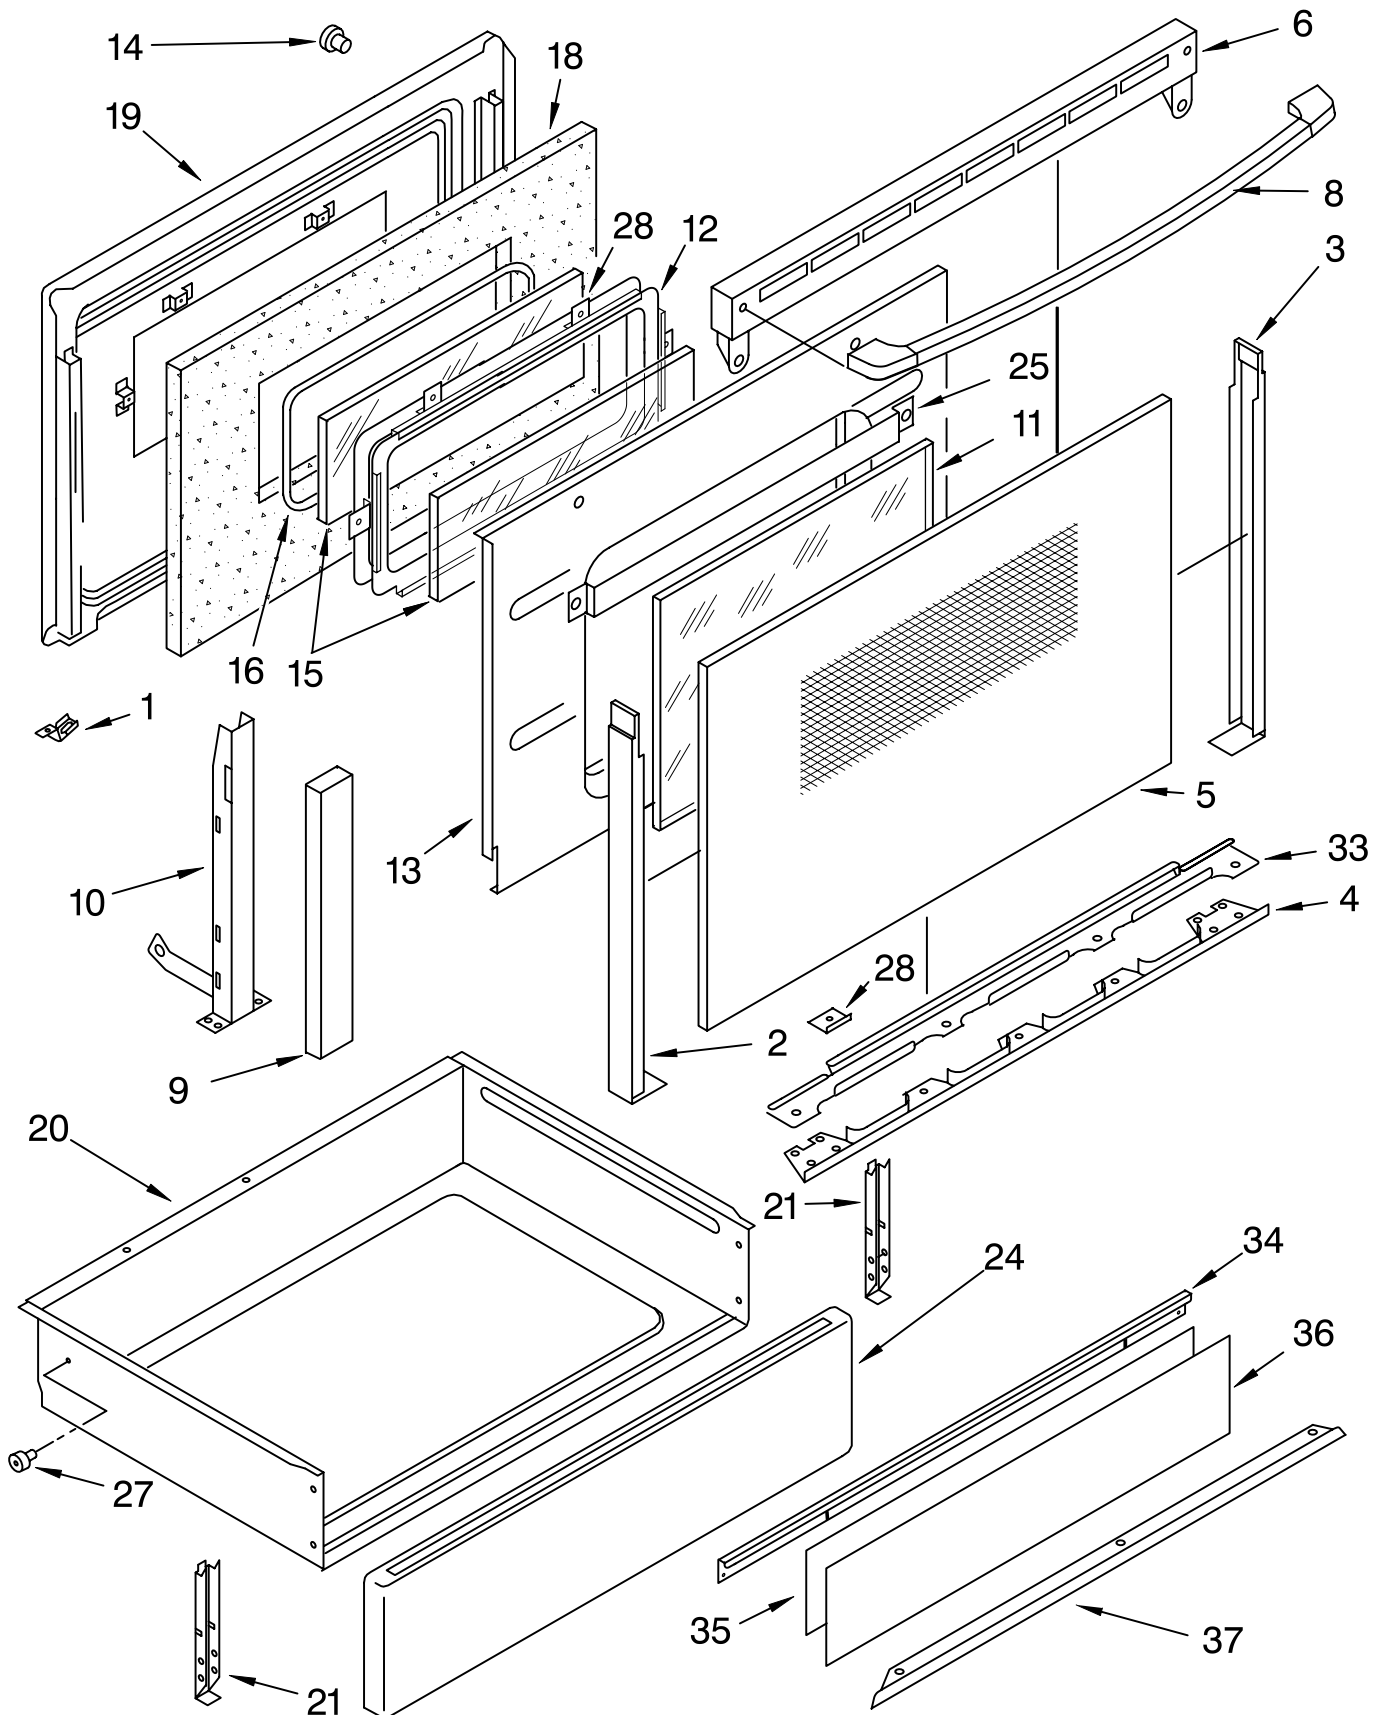

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS

For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1

(White)

(Almond)

(Black)

(Black-Stainless)


(Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			5		Glass, Door	12	9781602	Frame, Window
1	9750676	Support, Door		9781627PW	White	13	9781586	Shield Door
2		Trim, Door-Left		9781627PT	Almond	14	9780771	Bumper, Rubber
	9750631PW	White		9781627PB	Black	15	9781593	Glass, Door (2)
	9750631PT	Almond		9753378	Stainless	16	9781587	Seal, Glass
	9750631PB	Black		9781627PC	Biscuit	18	9781626	Insulation
	9750631PC	Biscuit	6		Vent, Door	19	9781600GM	Liner, Door
3		Trim, Door-Right		9753498GW	White	20	9780583	Drawer & Roller
	9750632PW	White		9753498GT	Almond	21	9750169	Bracket, Drawer
	9750632PT	Almond		9753498GB	Black		9780272	Screw (4)
	9750632PB	Black		9753498GC	Biscuit			10 x 1/2
	9750632PC	Biscuit		9780265	Screw (2)		9780265	Screw (2)
4		Trim, Door Bottom		9781659	Gasket, Door Vent	24		Front, Drawer
	9781209PW	White		9781490	Seal, Door (2)		9750168PW	White
	9781209PT	Almond			Vent Side		9750168PT	Almond
	9781209PB	Black	8		Handle, Door		9750168PB	Black
	9781209PC	Biscuit		9780523PW	White		9750168PC	Biscuit
	9780265	Screw, 10 x 3/8		9780523PT	Almond	25	9750693	Heat, Channel
				9780523PB	Black	27	423713	Support, Roller
				9780523PC	Biscuit	28	9781502	Spacer, Door (8)
				9781072	Screw (4)		9780265	Screw (8)
					10 x 1/2	33	9781771	Steam, Deflector
			9	9781449	Gasket, Door Glass (4)	34	9750614PB	Trim, Drawer-Top
			10	9750234	Hinge, Door R or L	35	9753329	Spacer
				9780265	Screw (4)	36	9753293	Panel, Drawer
					10 x 3/8			(Stainless)
				90296	Clip	37	9750613PB	Trim, Drawer-Bot
			11	9781592	Baffle, Glass			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN CHASSIS PARTS

For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1  
(White) (Almond) (Black) (Black-Stainless) (Biscuit)

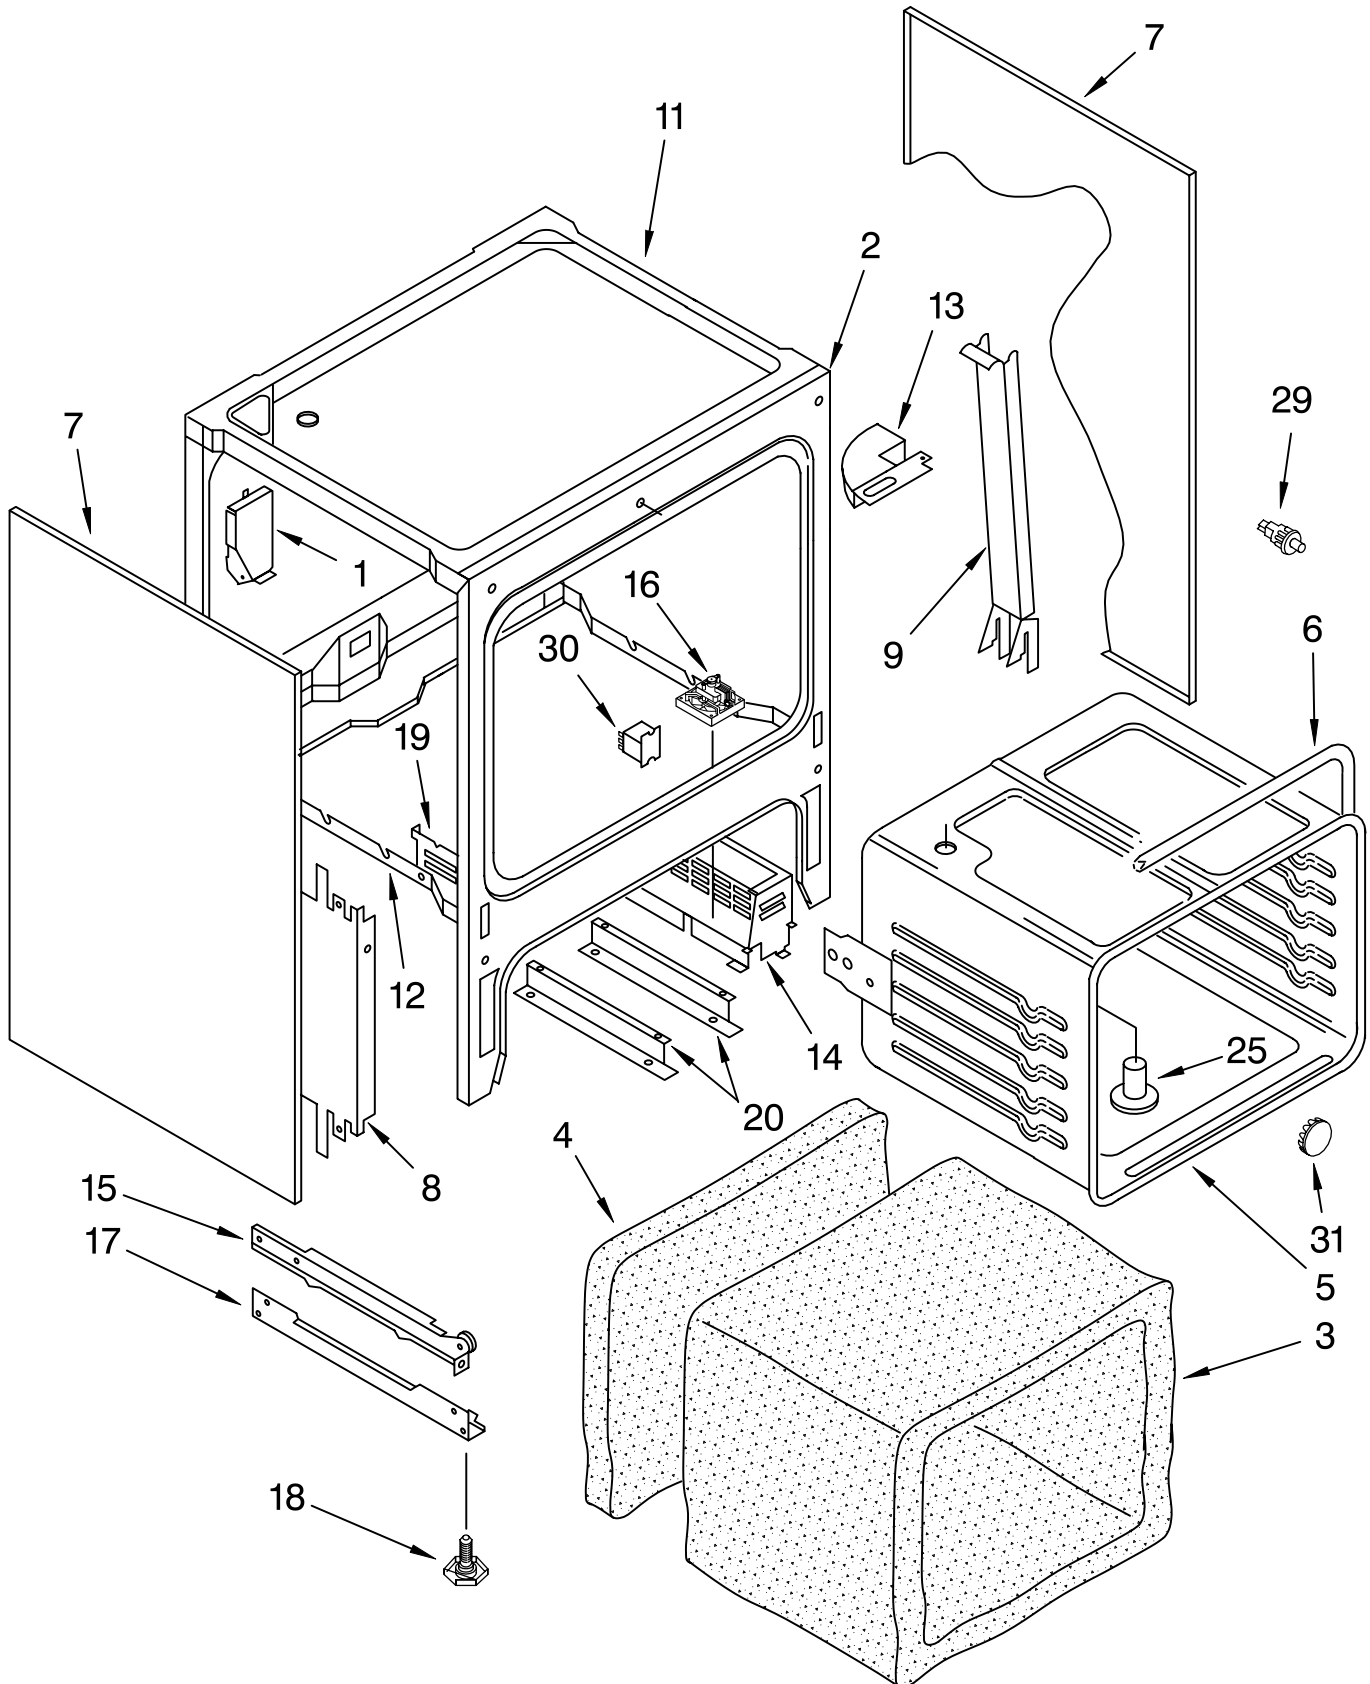

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN CHASSIS PARTS

For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1  
(White) (Almond) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9751350	Vent Box, Oven
	9780265	Screw, (6)
2	9750514GM	Chassis, Front
3	9750222	Insulation, Wrap
4	9750221	Insulation, Rear
5	9781292GM	Oven Liner
6	3191649	Gasket Oven
7		Oven , Side L or R
	9750148PW	White
	9750148PT	Almond
	9750148PB	Black
	9750148PC	Biscuit
	9780265	Screw (4)
		10 x 3/8
8	9780664	Shield, Insulation
	9780265	Screw (2)
9	9751789	Fan Duct, Side
	9780265	Screw, (4)
11	9752637	Burner Box
	9780265	Screw (7)
		10 x 3/8
	9780275	Screw, (2)
		8 x 3/8
12	9750142	Oven Bottom
	9780265	Screw (9)
		10 x 3/8
13	9751653	Duct, Top
	9780265	Screw
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left
		10 x 3/8
	9750224	Drawer Rail, Right
	9780265	Screw (2)
		10 X 3/8
16	9751020	Motor, Fan
	9751808	Screw, (3) #8 x 1"
17	9750147	Bottom Rail (2)
	9780265	Screw, (8)
		10 x 3/8
18	312701	Foot, (4)
19	9750149	Hinge, Door L or R
	9780265	Screw, (2)
		10 x 3/8
	9780272	Screw (2)
		10-16 x 1/2
20	421771	Support Rail, Pan
	9780265	Screw, (2)
		10 x 3/8
25	9753091	Vent, Tube
29	9781581	Door Switch
30	9751948	Relay
	9751808	Screw (3)
31	9780578	Button, Plug

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1  
(White) (Almond) (Black) (Black-Stainless) (Biscuit)

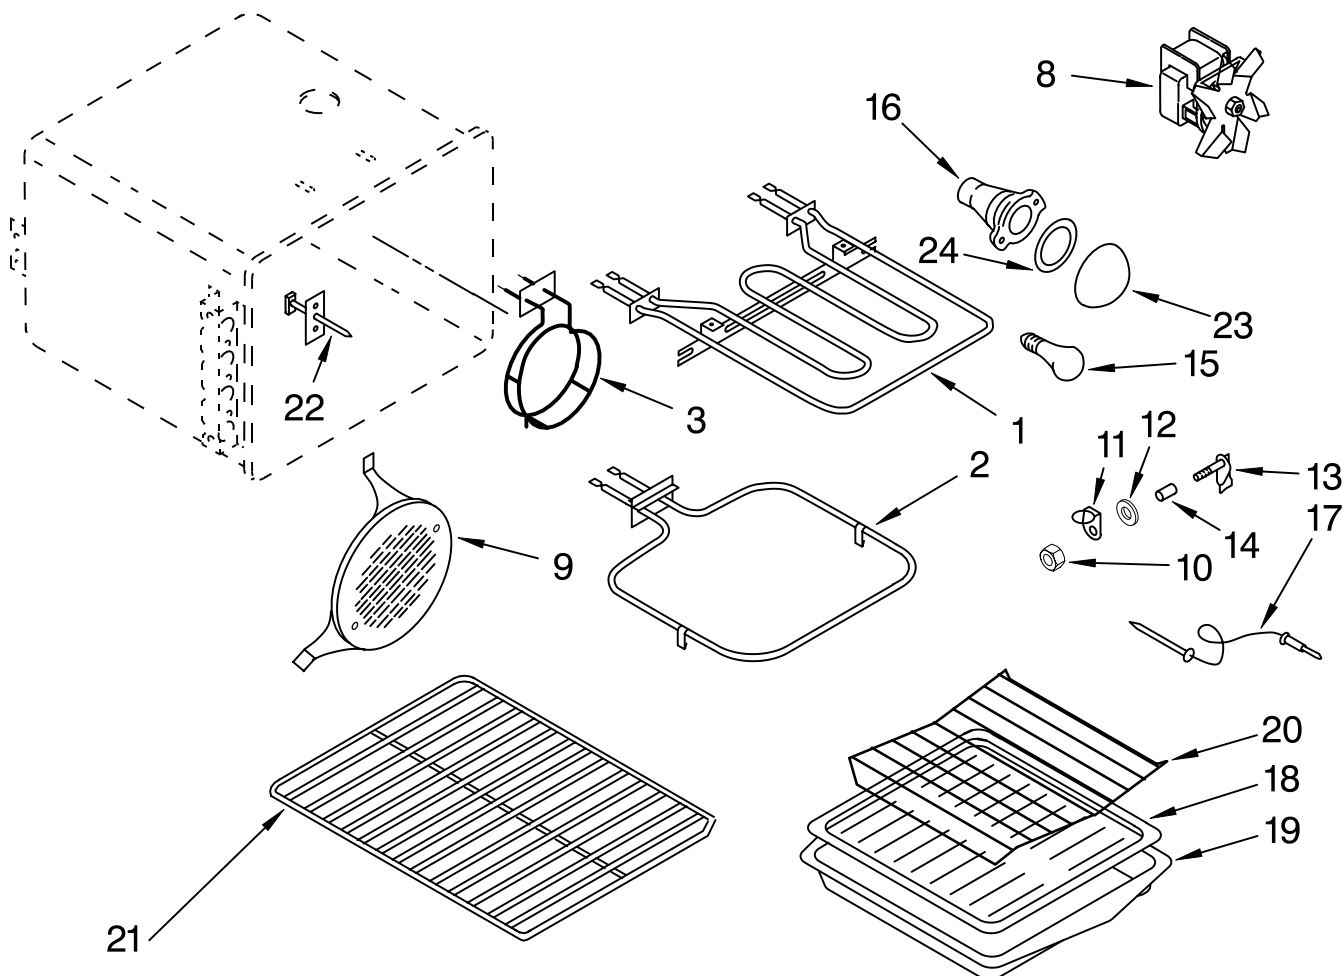

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9750967	Element, Broil
2	9750213	Element, Bake
3	9751447	Element, Convection
	9781509	Screw, Elements 8-32 x 3/8

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

8	9781543	Assembly, Fan
	9780272	Screw (3) 10 x 1/2
9	9752670GM	Baffle, Convection
	9781509	Screw (2)
10	4167277	Lock-Nut, Cvr.Jack
11	4167266	Jack Cover
12	305289	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	8935	Bulb, Oven


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

16	9781050	Light, Socket
17	3150144	Probe
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
20	9750827	Rack, Roasting
21	9750823	Rack, Standard (3)
22	8053344	Sensor
	9781509	Screw, (1) 8-32 x 3/8
23	9781049	Lens, Light
24	3184533	Gasket, Lens

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# REAR CHASSIS PARTS

For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1  
(White) (Almond) (Black) (Black-Stainless) (Biscuit)

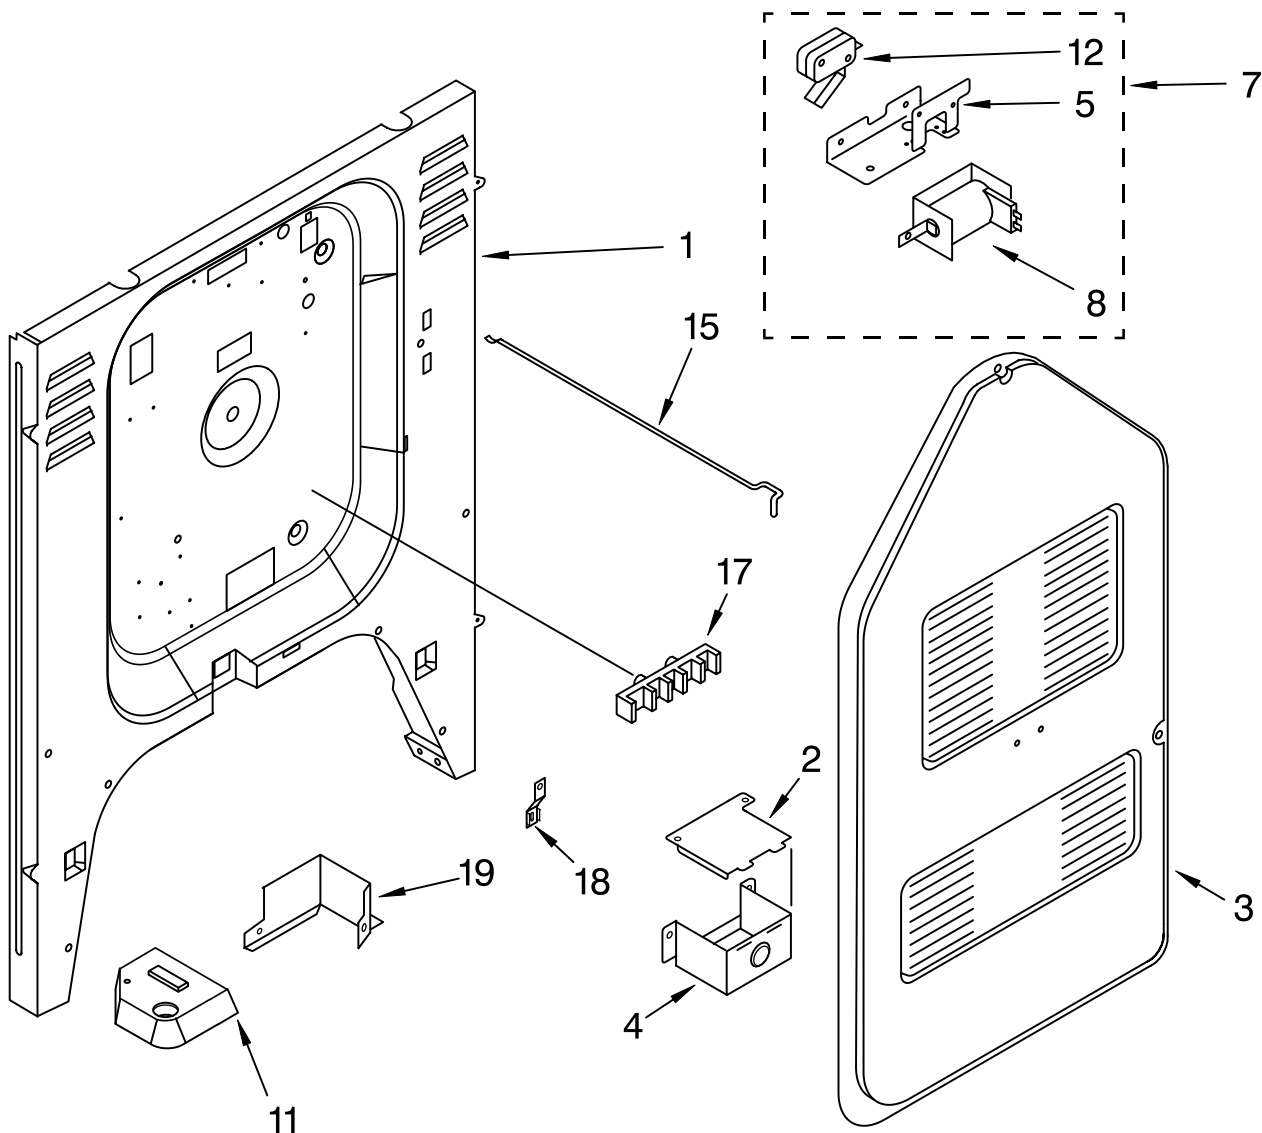

Illus. No.	Part No.	DESCRIPTION
1	9751051	Back Panel,Chassis
	340184	Screw (2)
		10-16 x 1 1/2
	423247	Screw (2)
		10-16 x 3/8
2	9752345	Cover, Terminal Box
	9780265	Screw (2)
		10 x 3/8
3	9751353	Panel, Rear Cover
	423247	Screw (2)
		10 x 3/8

Illus. No.	Part No.	DESCRIPTION
4	9752344	Box, Terminal
	9780272	Screw (2)
5	9751418	Bracket, Lock
	9780265	Screw (2)
		10 x 3/8
7	9751439	Oven Lock Assembly
	9780265	Screw (2)
		10 x 3/8
8	9751590	Solenoid
	422222	Screw
		10-32 x 5/16
	424238	Washer
11	9753413	Block, Balance
	340184	Screw, 10-16x1-1/2

Illus. No.	Part No.	DESCRIPTION
12	9751763	Switch, Interloc
	9750887	Screw, (2)
	9750888	Nut (2)
15	9750523	Rod, Lock
17	258076	Terminal Block
	98884	Screw, 10-16 x 1
	112432	Nut, Brass (3)
18	3169573	Ground Strap
	313660	Clip
	690989	Screw, Ground
19	9751798	Back, Vent
	9780265	Screw (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



# MISCELLANEOUS PARTS

For Models: KESC307GWH1, KESC307GAL1, KESC307GBL1, KESC307GBS1, KESC307GBT1  
(White) (Almond) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
<b><u>SPLICING WIRES--25FT. LENGTH</u></b>		
242828	Wire, Black	12 Ga. 150°C
242820	Wire, Black	14 Ga. 150°C
242821	Wire, Blue	14 Ga. 150°C
242822	Wire, Brown	14 Ga. 150°C
242830	Wire, Brown	14 Ga. 200°C
242823	Wire, Green	14 Ga. 150°C
242824	Wire, Orange	14 Ga. 150°C
242829	Wire, Red	12 Ga. 150°C
242825	Wire, Red	14 Ga. 150°C
242831	Wire, Red	14 Ga. 200°C
242826	Wire, White	14 Ga. 150°C
242827	Wire, Yellow	14 Ga. 150°C
242832	Wire, Yellow	14 Ga. 200°C
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>		
72017	White	
72107	Almond	
72109	New Avocado	
72108	Coffee	
72110	Harvest Gold	
72112	Toast	
72113	Platinum	
511873	White Porcelain	(2 Oz.)
4392899	Biscuit	

Illus. No.	Part No.	DESCRIPTION
<b><u>PAINT, PRESSURIZED SPRAY (13 oz.)</u></b>		
350930	White	
350956	Almond	
261888	New Avocado	
261886	Coffee	
261890	Harvest Gold	
285365	Toast	
285366	Platinum	
285006	Superior Black	
206922	Primer (White)	
4392901	Biscuit	
<b><u>PAINT, BULK (1 qt.)</u></b>		
799344	White (Uncut)	
978883	Almond (Uncut)	
261891	Harvest Gold (Uncut)	
285367	Toast (Uncut)	
285368	Platinum (Uncut)	
4392900	Biscuit	
<b><u>REFINISHING MATERIAL</u></b>		
799832	Kit, Porcelain Repair (White)	
242756	Touch-Up Self-Clean (1/2 Pt.)	
<b><u>INSULATION</u></b>		
9750222	Insulation, Wrap	
9750221	Insulation, Rear	
<b><u>CLEANER, COOKTOP</u></b>		
3184477	Glass Cleaner	
3183488	Scraper	
9753543	Cooktop Cleaner	

Illus. No.	Part No.	DESCRIPTION
<b><u>ACCESSORIES</u></b>		
241430	Foil, Aluminum	Oven (18" X 25')
<b><u>LUBRICANT</u></b>		
261582	Grease	
<b><u>ANTI-TIP KIT</u></b>		
9751745	Anti-Tip Kit	
<b><u>LITERATURE PARTS</u></b>		
LIT9752043	Installation	Instructions
LIT9753309	Use & Care Guide	
LIT9752686	Smart & Easy Guide	
LIT4449066	Cookbook T/C Ovens	
LIT9753027	Tech Sheet	
LIT9753028	Wiring Diagram	
LIT9752775	Template, Anti-Tip	
LIT3191638	Safer Cooking Tips	
<b><u>WIRING HARNESS PARTS</u></b>		
9781758	Harness, Wire	(SI/Main/Conv)
9781767	Harness, Wire	(Control)
9781656	Harness, Wire	(L-2)
9781822	Harness, Wire	(Cooktop)
9781769	Harness, Wire	(Front Console)
9750376	Harness, Wire	(Door Switch)
9751139	Harness, Wire	(Meat Probe)
9751868	Grommet, Harness	
20082084	Tie, Wire	
3196520	Clip, Wire	

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST